

## BNC



NF-32

NF-32 (for RG-6)  
NF-33 (for RG-59)  
NF-34 (for RG-58)

Twist-on Male.

Macho de Rosca.



NF-34



NF-53

Female to "F" Female.

Hembra a Hembra "F".



NF-75

Double Male Adppter.

Adaptador Macho Doble.



NF-20

Female Chassis Connector

Conector Hembra.



NF-19

Double Female Adapter.

Adaptador Hembra Doble.



NF-71A

NF-71A (50 Ohms)

NF-71B (75 Ohms)

NF-71C (90 Ohms)

Terminator .

Terminador.



NF-71B



NF-71C



NF-8

Male to RCA Female.

Macho a Hembra RCA.



NF-13

Male to UHF Female.

Macho a Hembra UHF.



NF-16

Female to RCA Male.

Hembra a Macho RCA.



NF-76

Female to UHF Male.

Hembra a Macho UHF.



NF-73

3 Female "T" Adapter.

Adaptador "T" de 3 Hembras.



NF-14

Male to Double  
Female "T" Connector.

Conector "T" Macho  
a Hembra Doble.