


SCP Structured Cable Products Quality Installations Deserve Quality Products

IN-WALL BALUN INSTALLATION MANUAL Parts 132

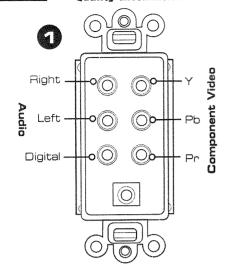

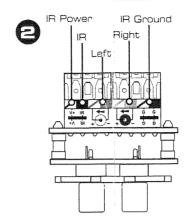

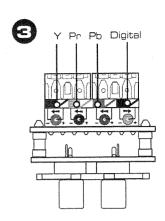

 
Strip about 1.5" of outer jacket from Cat-5 cables

 



Untwist the pairs of wires.




Remove the clear plastic punch-down wire caps from the punch-down terminals.







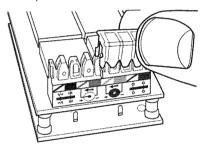


  
Place the wires into the punch-down slots following the color code shown on the terminal.

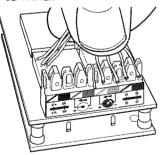




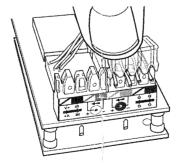




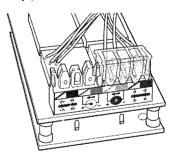


Place the second set of wires into the terminal following the color code.

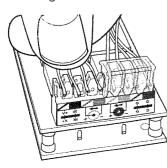

Punch-down the wires then snap the punch-down cap in place.

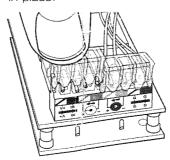


After repeating steps 5-11 for the second Cat-5 cable, the balun connection should look similar to this.

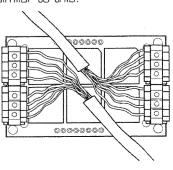

Making IR connections using in-wall balun. (Installations may vary)


Either IR sensors or IR emitters may be connected to the baluns using the 3.5mm (1/8") jacks. The most common arrangements are shown below.

Alternatively, when 3.5mm plugs are not used, the sensors, connecting block or emitters may be wired directly to the Cat-5 wires, bypassing the 110 terminals and 3.5mm jacks.

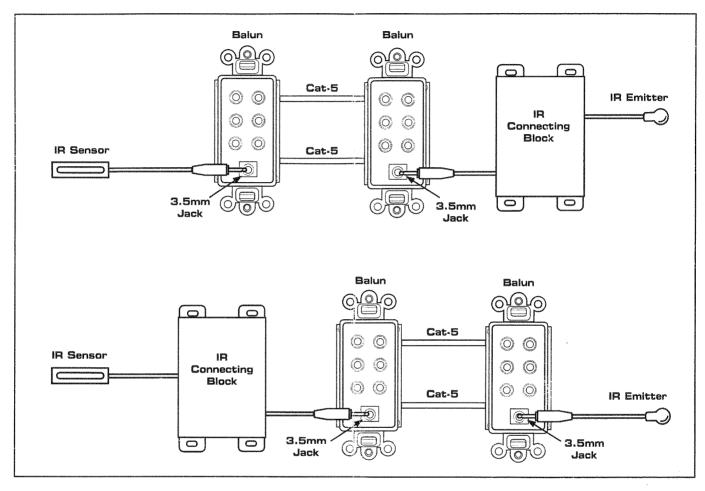

Changing Faceplate Color

To change the faceplate color from the factory installed White to the included Light Almond, follow these steps.

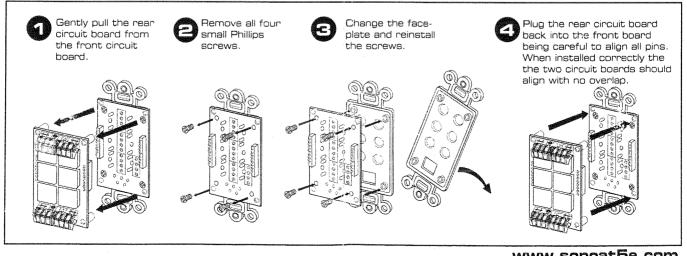

www.scpcat5e.com