

Signal Vision®

Amplifier Installation Guide





Table of Contents



Standard Installation

SVA-15PRSM Subscriber Amplifier	2
SVA-15PRSMS Subscriber Amplifier.....	3
SVA-152PRSM Subscriber Amplifier	4
SVA-154PRS Subscriber Amplifier.....	5
SVA-158PRS Subscriber Amplifier.....	6

Passive VoIP Installation



SVA-152PRSVIP Subscriber Passive VoIP Amplifier	7
SVA-154PRSVIP Subscriber Passive VoIP Amplifier	8
SVA-15158AFRSVIP Subscriber Passive VoIP Amplifier	9

Installation Instructions
(As seen on amplifier package material)

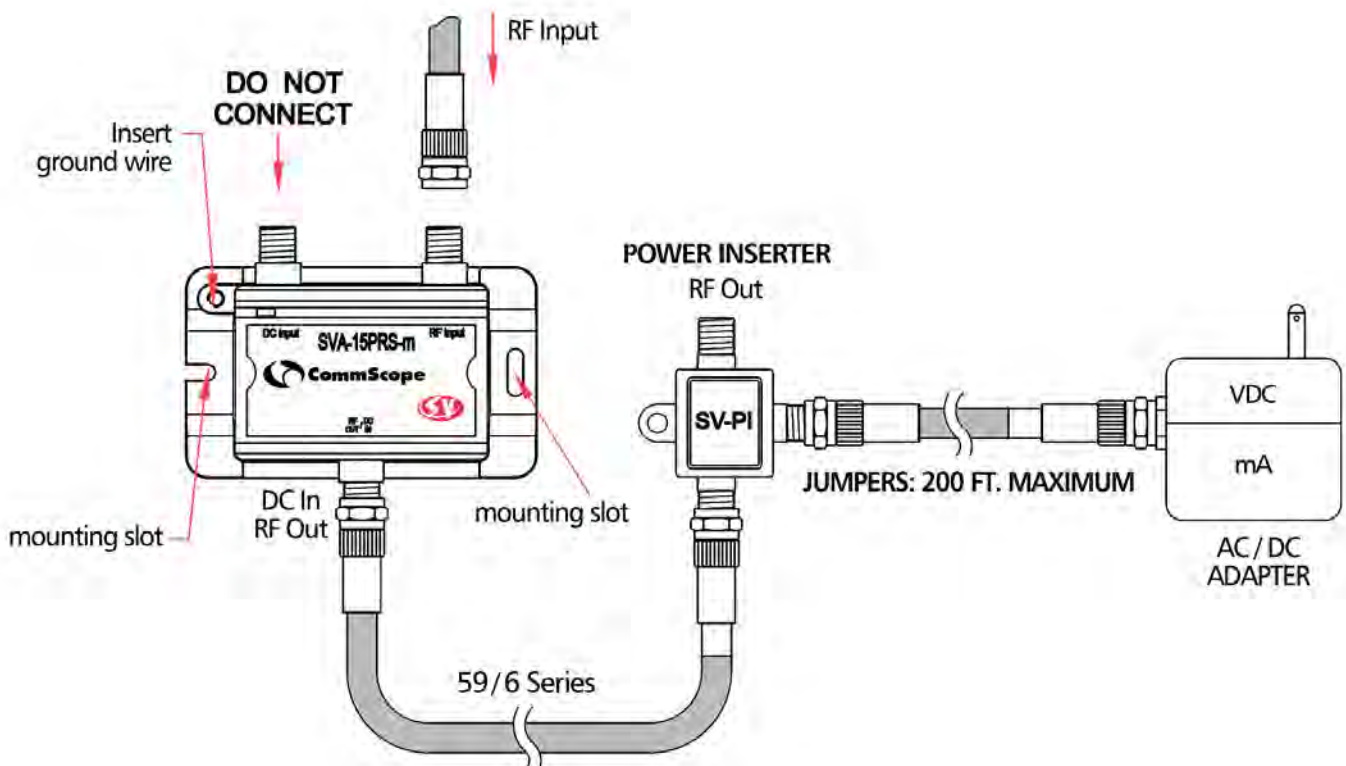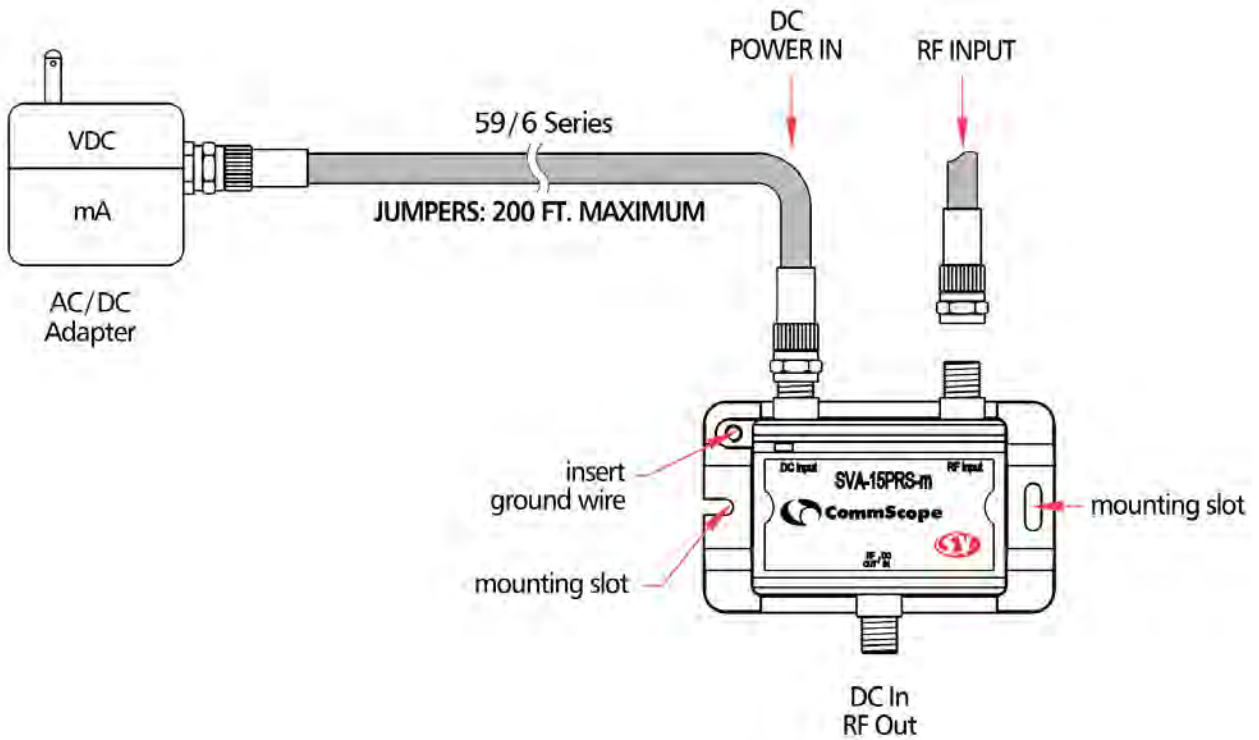



NOTE: Please follow standard recommended cable connectorization and installation practices.

Installation Instructions
(As seen on amplifier package material)

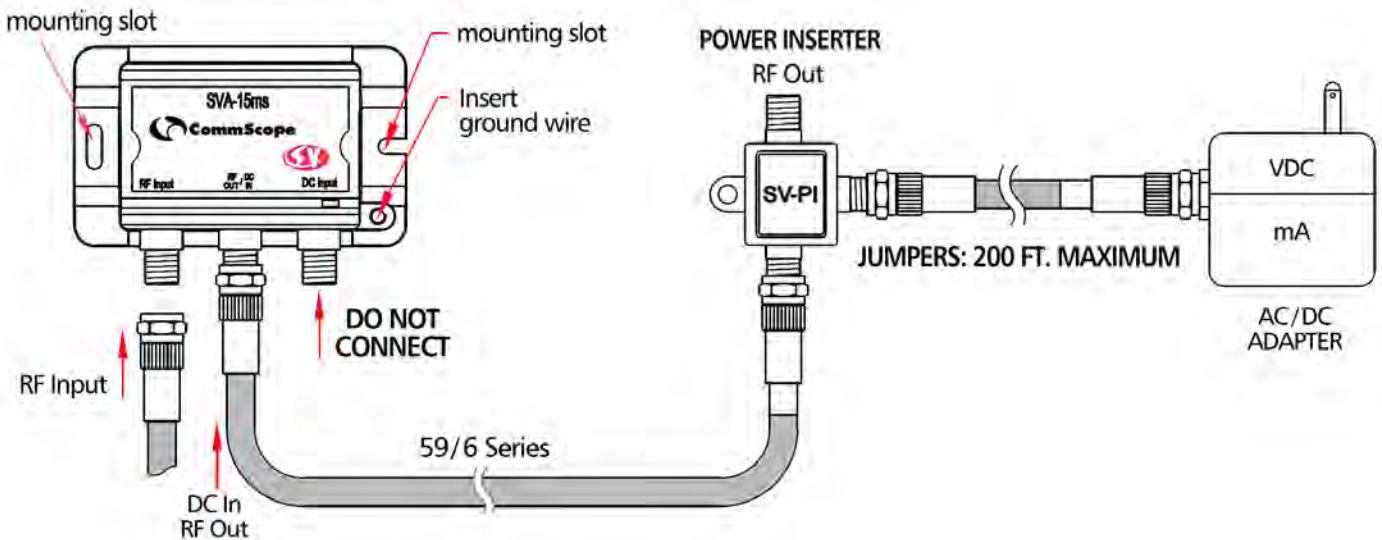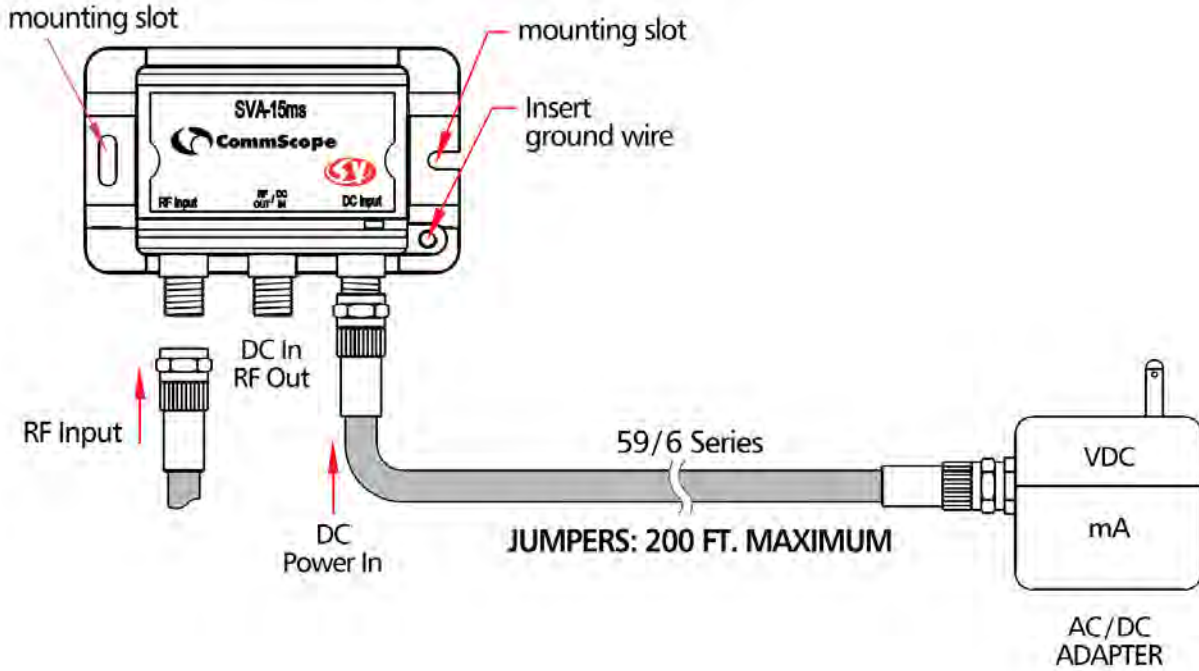



NOTE: Please follow standard recommended cable connectorization and installation practices.

Installation Instructions
(As seen on amplifier package material)

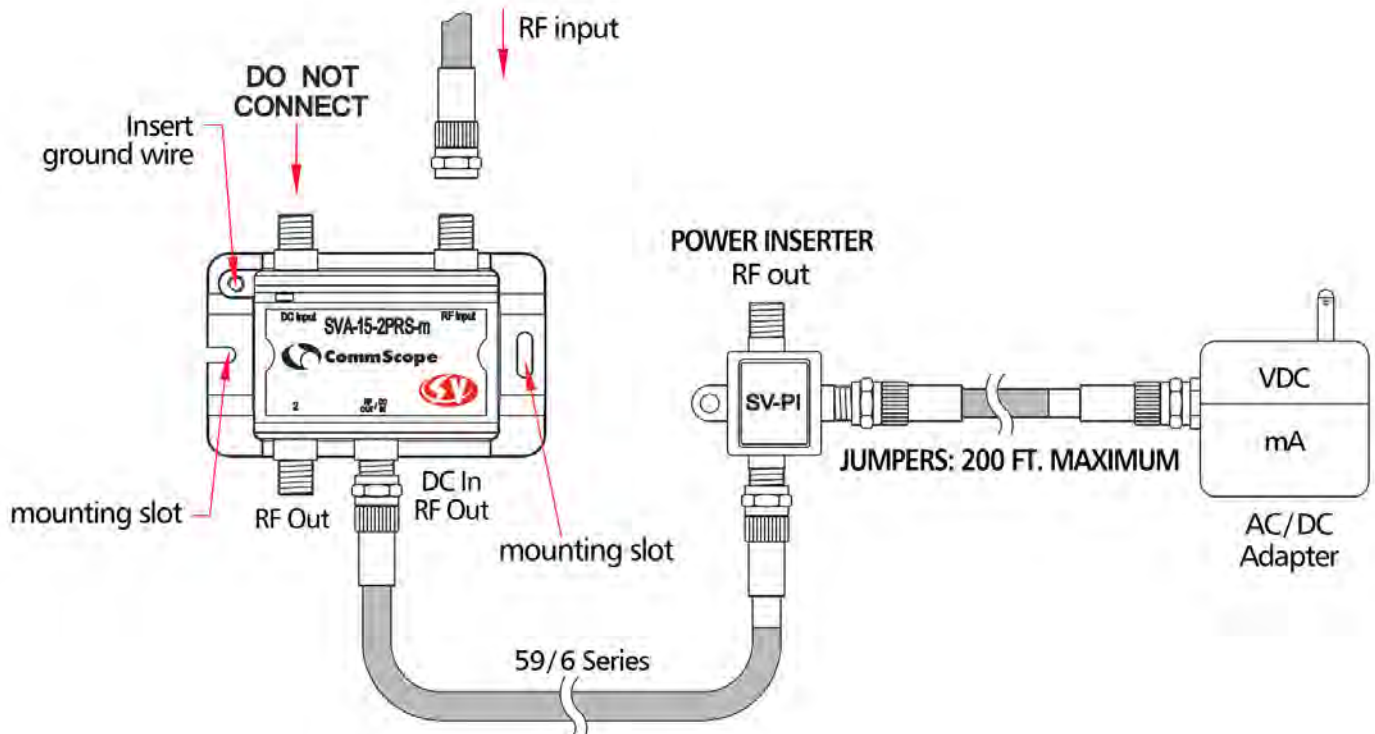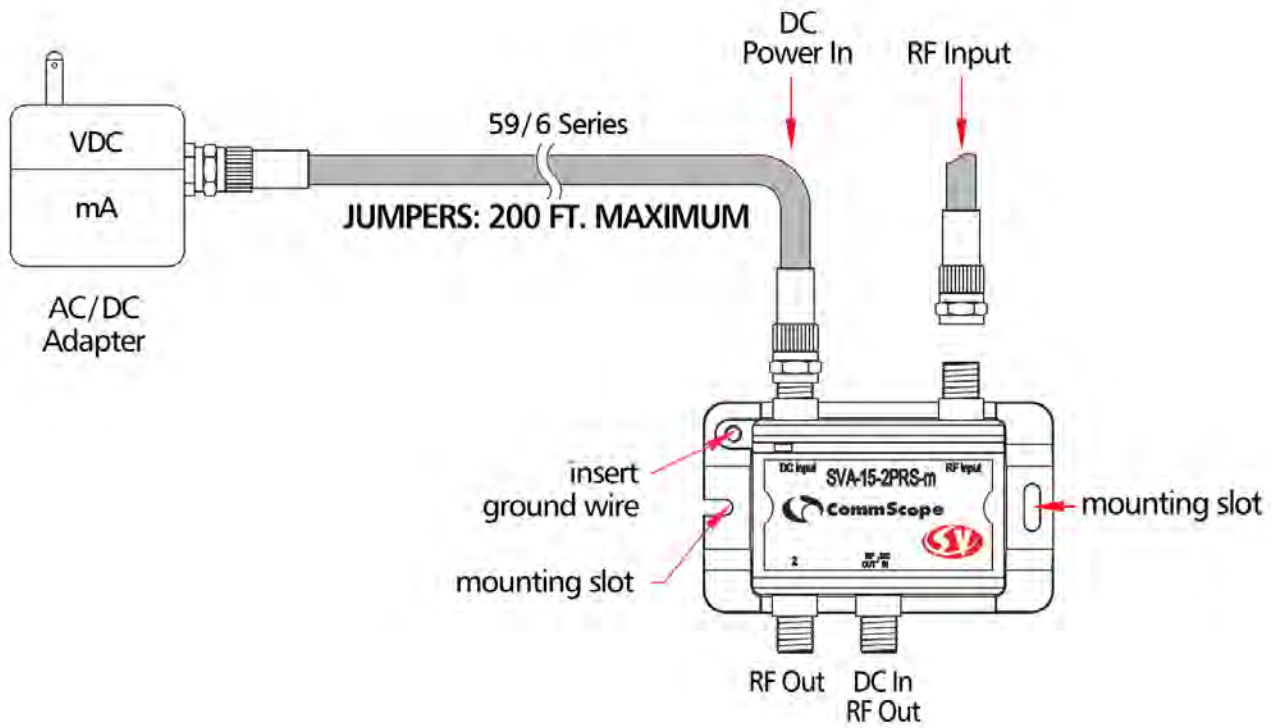



NOTE: Please follow standard recommended cable connectorization and installation practices.

Installation Instructions
(As seen on amplifier package material)

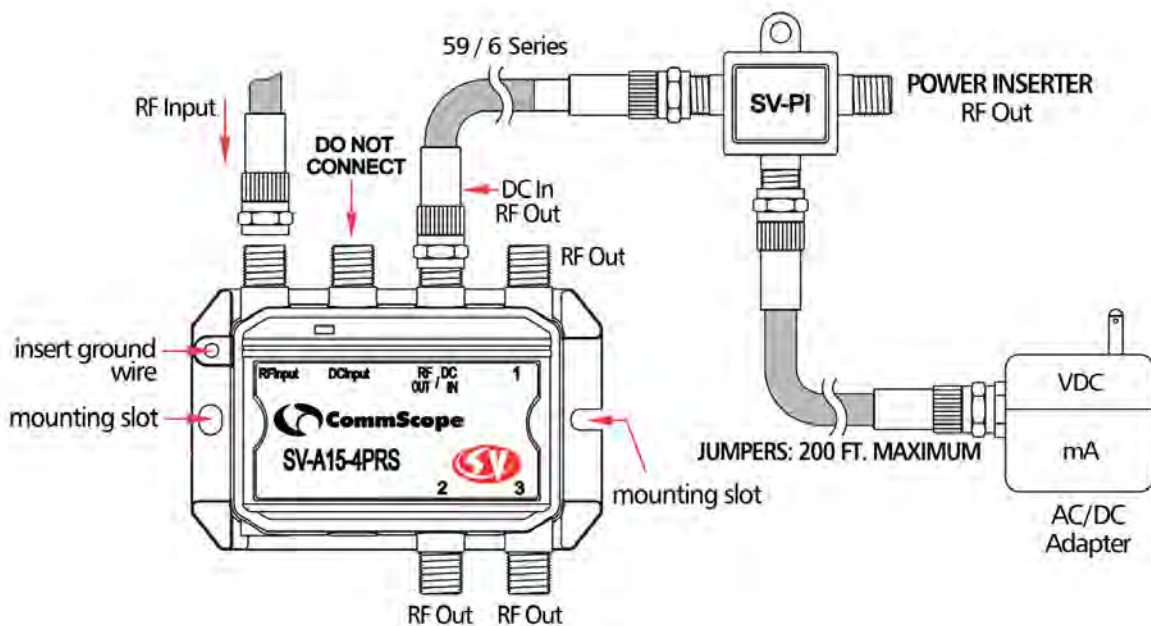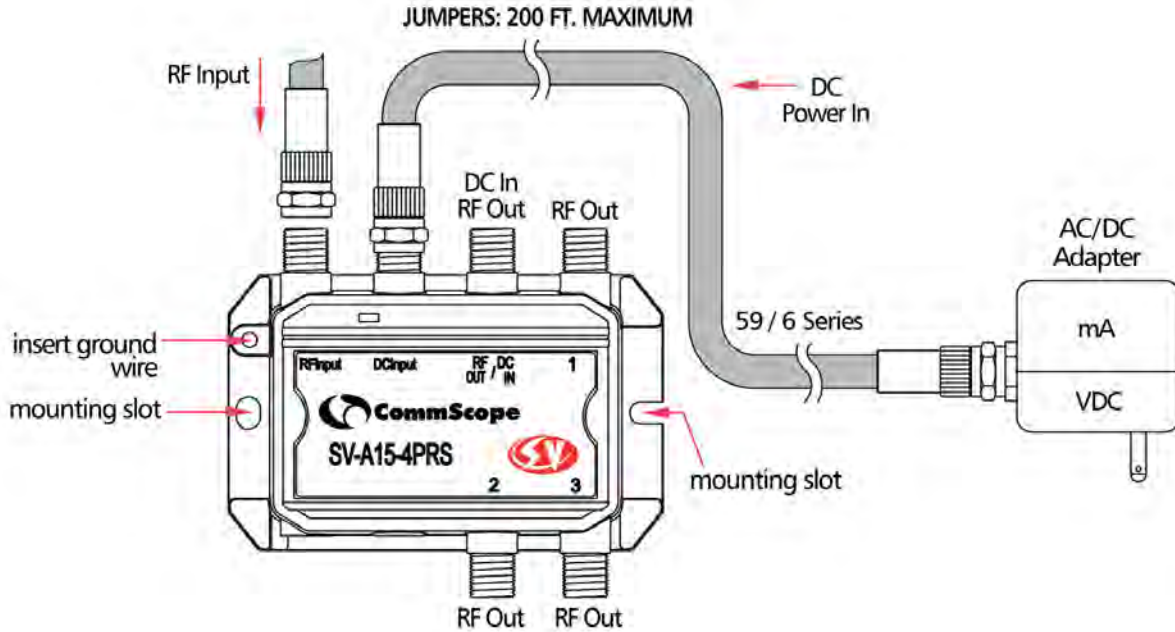

NOTE: Please follow standard recommended cable connectorization and installation practices.



Installation Instructions
(As seen on amplifier package material)

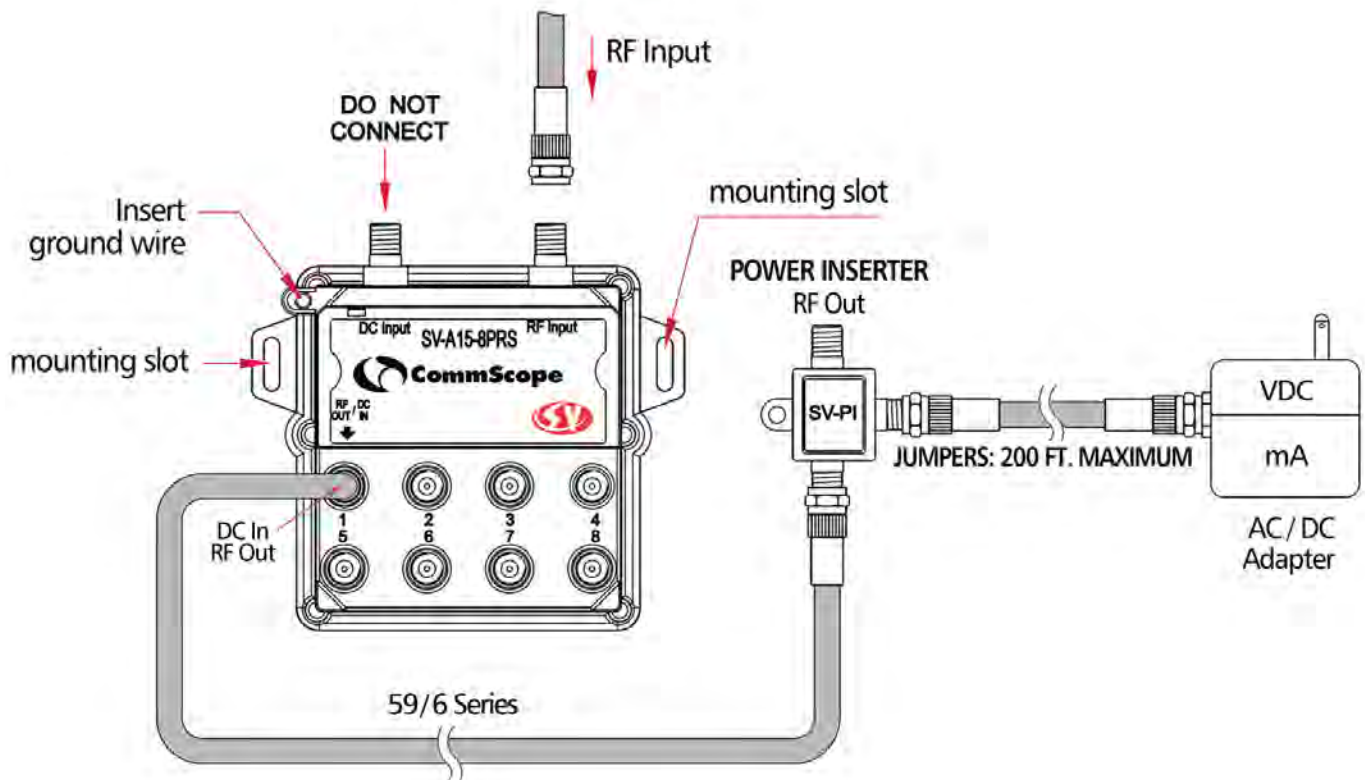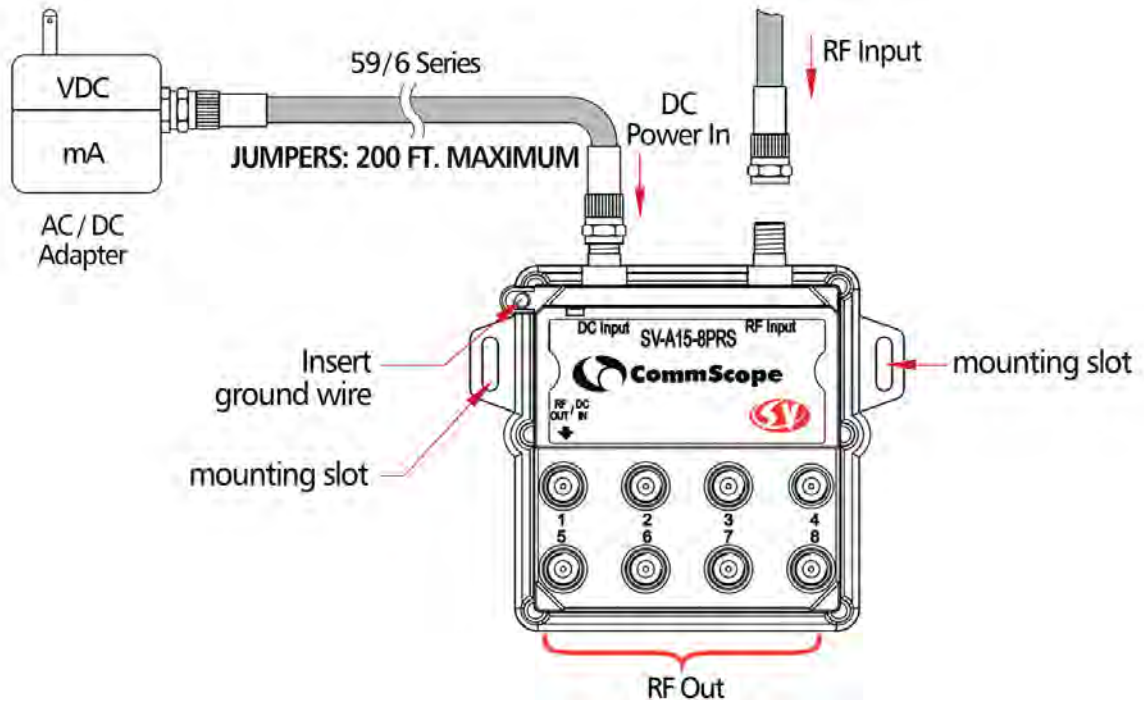

NOTE: Please follow standard recommended cable connectorization and installation practices.





Passive VoIP Installation Instructions (As seen on amplifier package material)

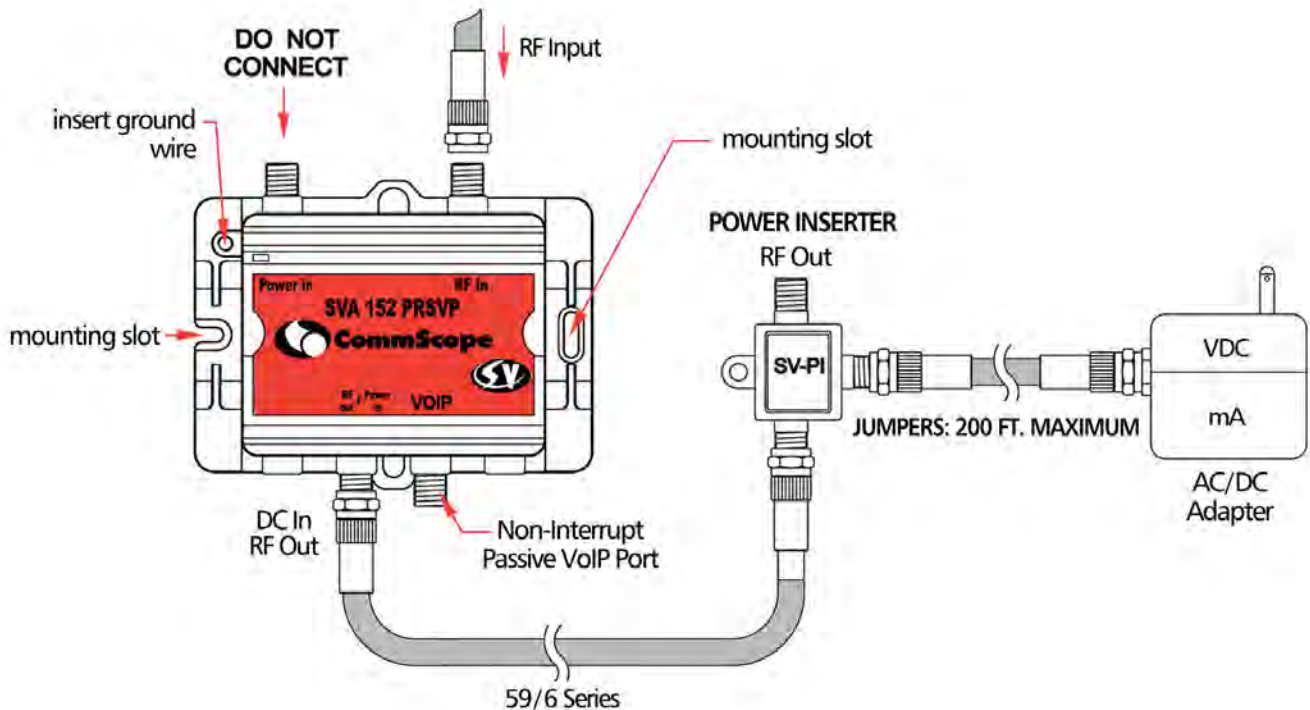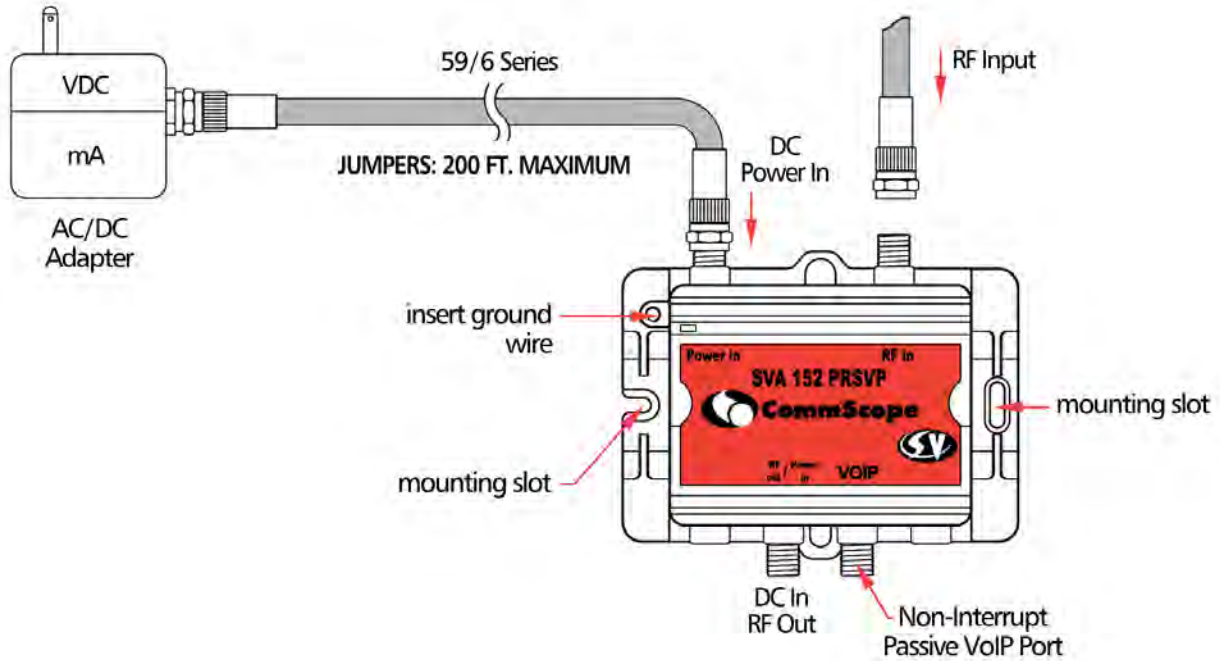

NOTE: Please follow standard recommended cable connectorization and installation practices.





Passive VoIP Installation Instructions (As seen on amplifier package material)

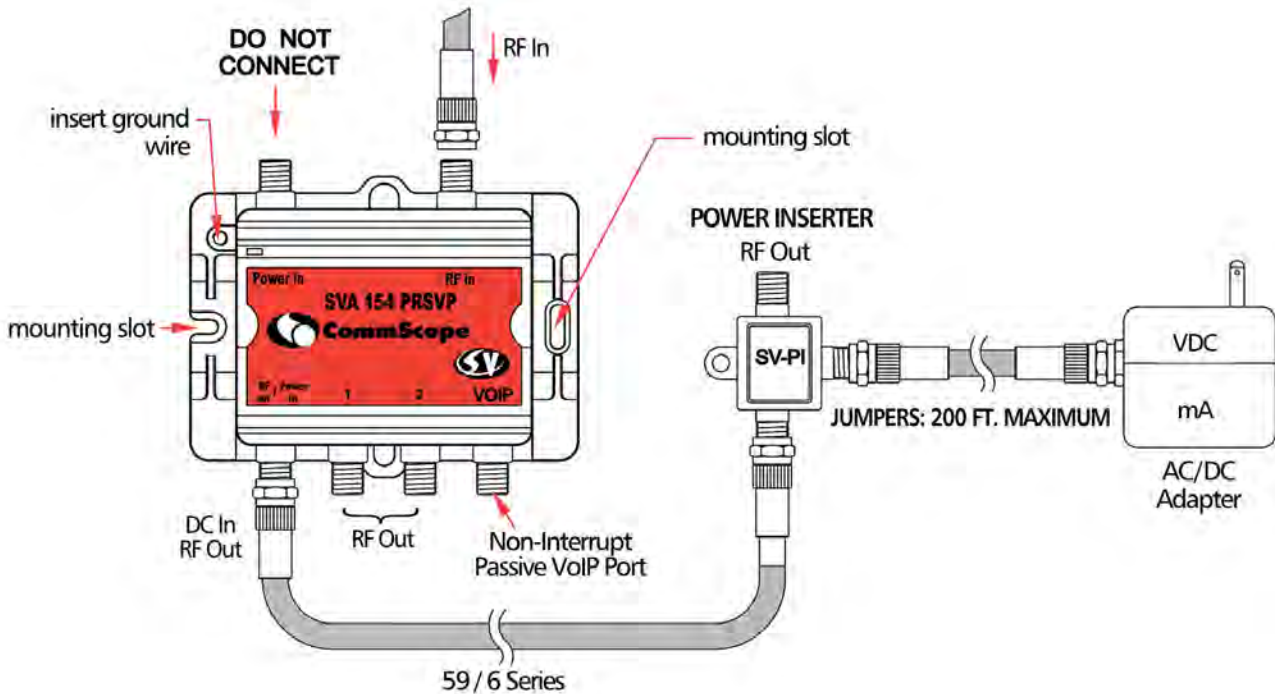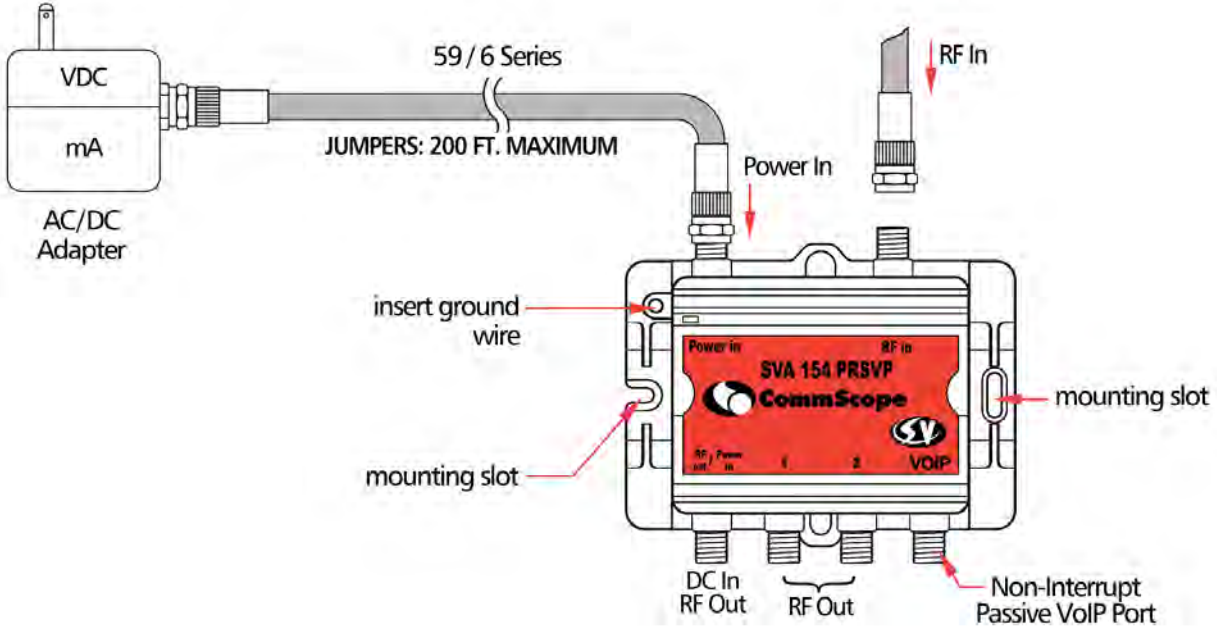

NOTE: Please follow standard recommended cable connectorization and installation practices.



Passive VoIP Installation Instructions (As seen on amplifier package material)

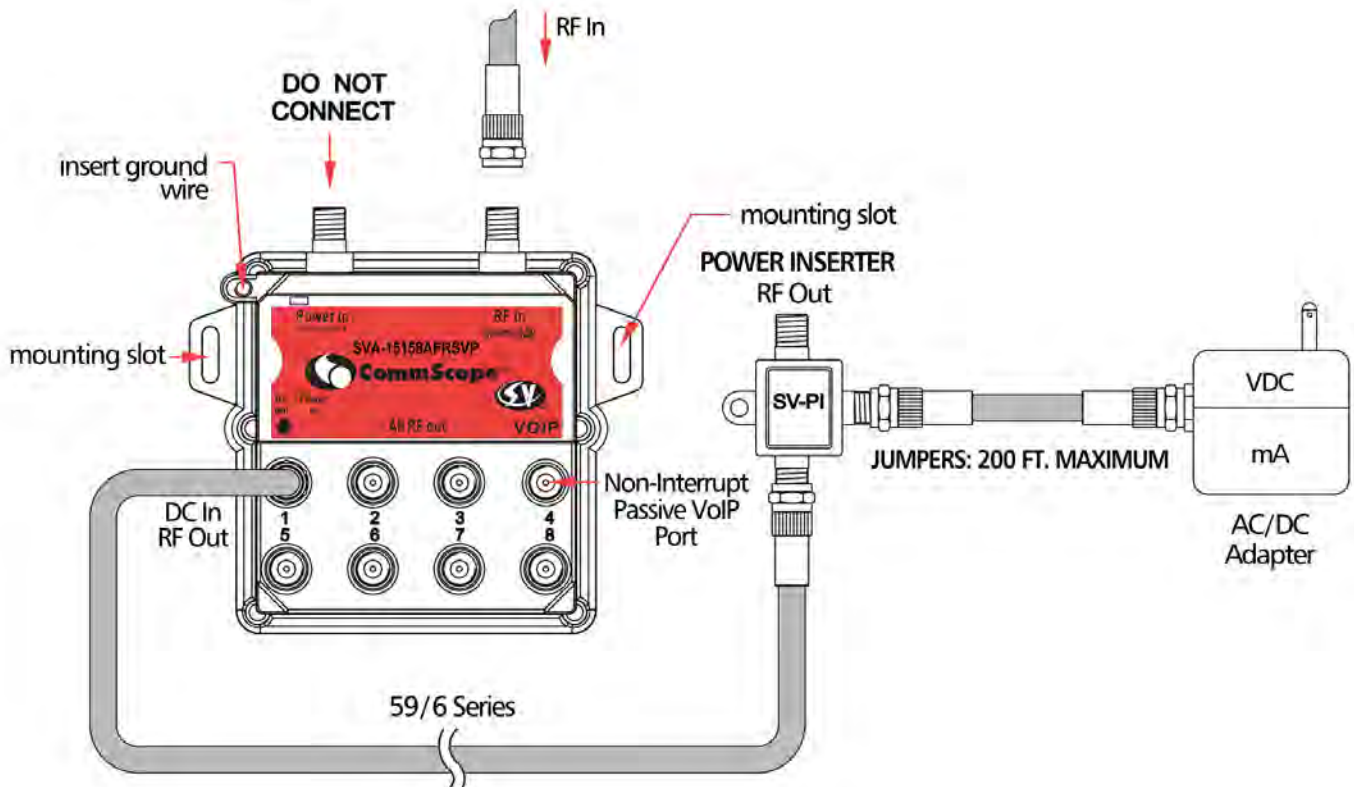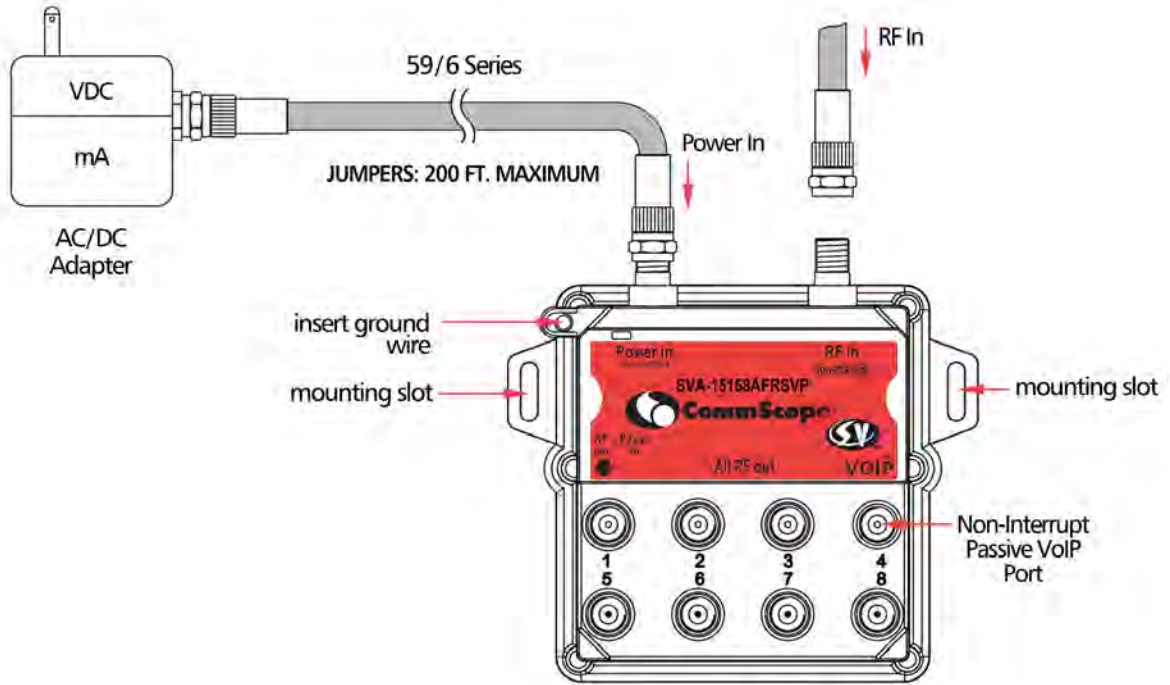

NOTE: Please follow standard recommended cable connectorization and installation practices.



P.O. Box 1729 • 1100 CommScope Place, SE • Hickory, North Carolina, 28603
Tel 800.982.1708 or 828.324.2200 • www.commscope.com