


Assembly Instructions

EZ 30-12W
EZ 30-18W
EZ 30-24W

Configuration "A"

(2.25 to 3.00 inch Diameter)

Upper Bracket

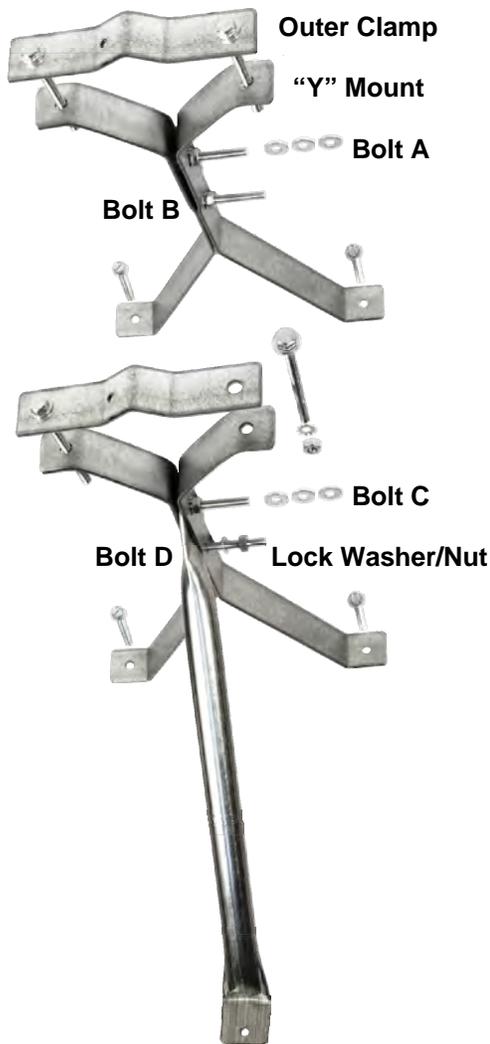

Lower Bracket


Main "Y" Body Assemblies are Identical in both "A" and "B" configurations. Start by assembling the (2) "Y" bodies out of the (4) half pieces provided. In all Configurations & Sizes, Bolt A in the Upper Bracket will require (3) ¼ inch Shim Washers placed together & in between the two halves of the "Y" with the bolt through all pieces.

For the Lower Bracket, 12 inch Models will place the 3rd Leg between the two halves at Bolt C position without any Shim Washers. 18 & 24 inch Models will require Shim Washer at Bolt C position, with the 3rd Leg inserted at Bolt D position.

Configuration "B"

(1.25 to 2.25 inch Diameter)

Upper Bracket

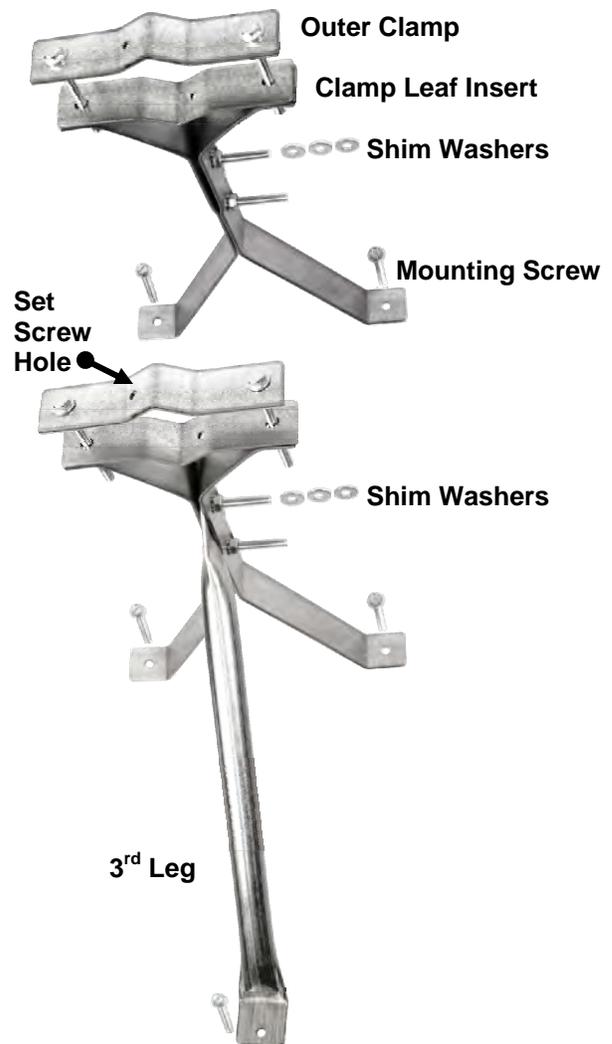

Lower Bracket

There are (4) Outer Clamps provided, Configuration "A" use only requires (2), however (2) extras can be used to double-up on the Outer Clamps for rigidity. Configuration "B" use will see all (4) Clamps used in Mirror fashion, with the Supported Mast sandwiched in between (1) used as a Leaf Insert and (1) used in a normal fashion.

All Outer Clamp pieces have a hole pre-drilled for use of a Set Screw (Customer Option, not provided) for Anti-Twist of the Mast. As Masts and Installation requirements vary, we ask that you provide and Install a the proper sized Set Screw as needed.